 




VCT Universal Baseplate

 
The VCT Universal baseplate has sleek lines, a comfortable shoulder pad and offers incredible balance. The VCT Universal features a long screw track for camera placement and balance. The rod mount is set back 3" further than on any other VCT style baseplate providing absolutely essential accessory room under your camera lens for a balanced rig.

Parts & Features

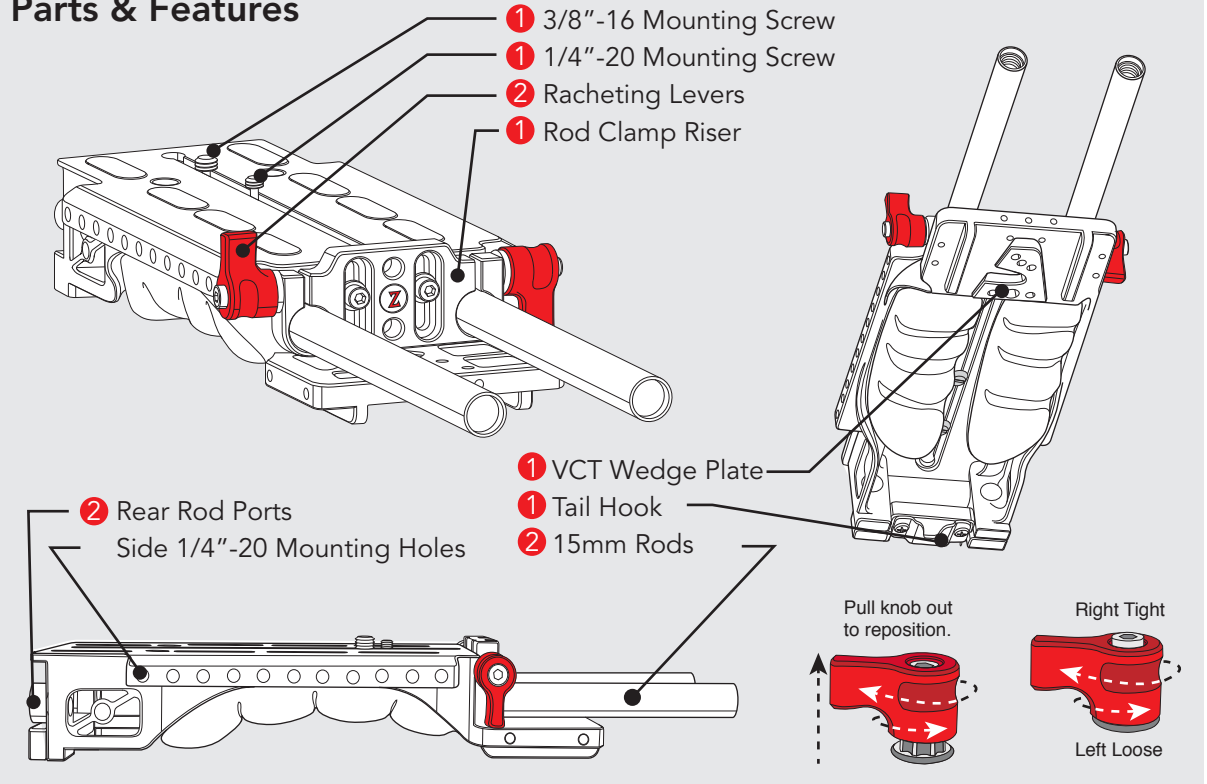

Mounting Camera


- ① From the bottom of the VCT Plate, screw the 1/4"-20 or 3/8"-16 mounting screw into the bottom your camera.
- ② Before securing in place, add on accessories to be used to help find the true balance of your camera. Align both the VCT and camera's center of balance and secure mounting screw in place.

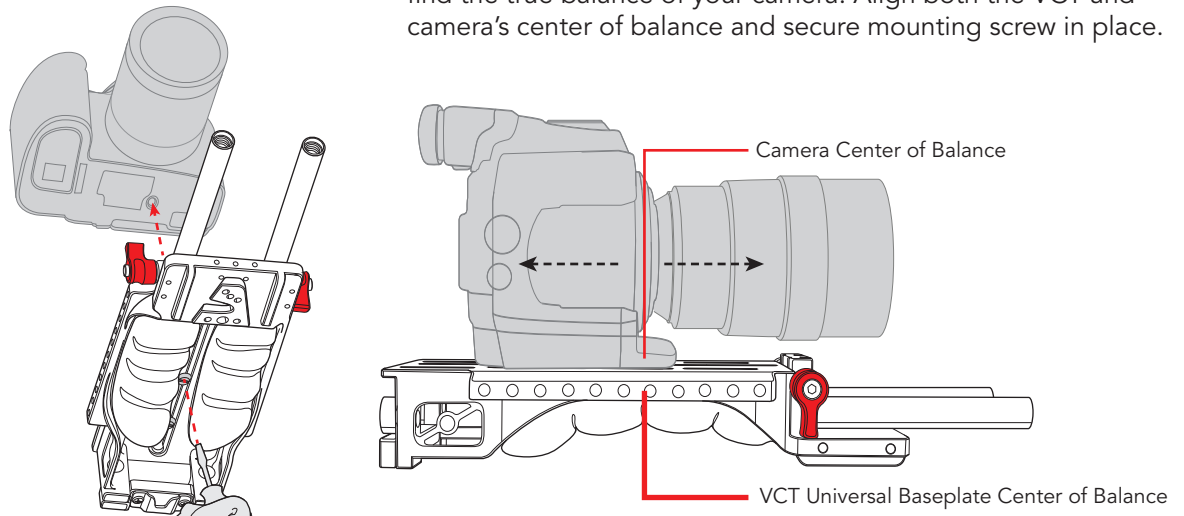

Mounting VCT Plate to VCT-14 Tripod Quick Release Plate (VCT-14 Sold Separately)

Mount VCT Plate to VCT-14 by sliding the front wedge into front slot of VCT-14 and the tail hook around the rear knob of VCT-14. The VCT-14 will click when the VCT Plate is locked into place.

 
Pull red lever on VCT-14 to release your Universal VCT Plate.

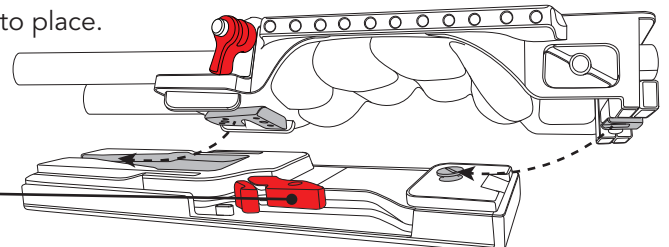

Check out our tutorial videos at zacuto.com

Additional Tripod Mounting Operation

 
If needed the tail hook position can be raised or lowered. Loosen both allen screws equally, raise or lower tail hook and relock both allen screws when in desired position.

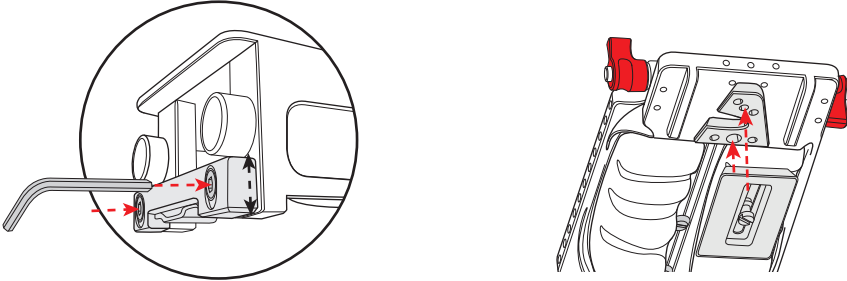

An alternative mounting method when using a tripod without a VCT14, is to mount your tripod's quick release wedge plate to the wedge on the bottom of the Universal VCT Plate


Attaching Rods

 Attach rods to VCT Plate by loosening ratcheting levers, sliding rods into place and then re-tighten levers.

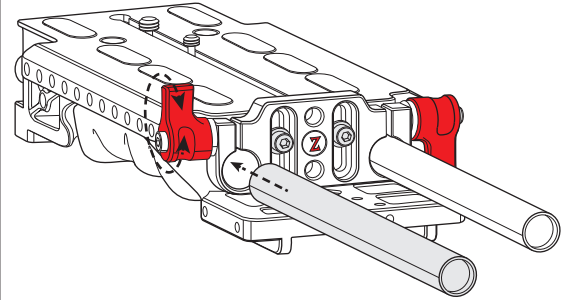


Additional Accessories (Available Separately)

 
Mount Rosette Rod Mount to attach handgrips by sliding onto front rods and securing in place. It can be positioned with the red lever up or down.

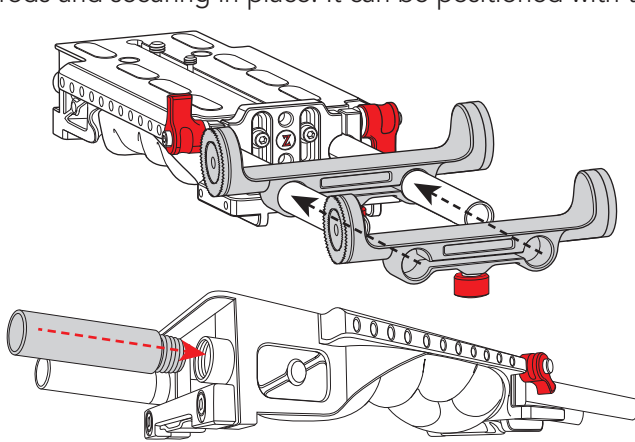

 Attach additional rod support in the rear rod ports, by screwing in male threaded rods.

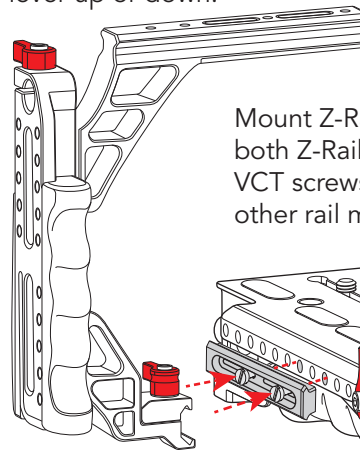

 
Mount Z-Rail to VCT Plate by screwing both Z-Rail 1/4"-20 screws into aligning VCT screws holes. Attach Half cage or other rail mounted accessories as needed.

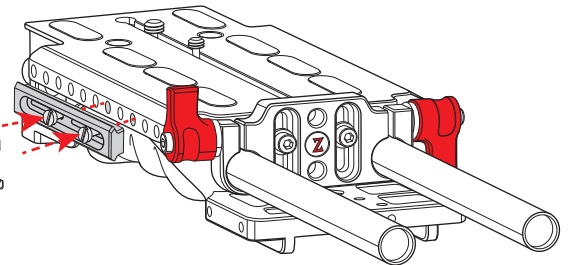


Adjusting Rod Height

The rod clamp riser may need to be adjusted to align accessories including matte boxes.

 For DSLR Cameras a QR Riser (Available Separately) will be needed to raise camera to matte box compatible height.

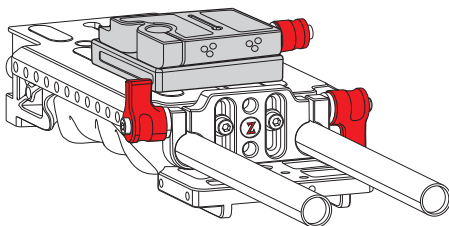

 Adjust rod height by loosening both front allen screws equally. Slide rods up or down for desired position and relock allen screws.

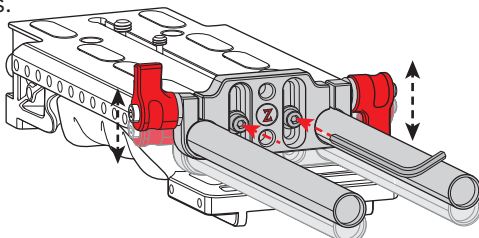

For Red Epic/Scarlet flip the rod clamp riser

- 1 Remove both allen screws and separate front jeep with rods from VCT body.
- 2 Flip front rods over from original position.
- 3 Align and remount allen screws to VCT body. Adjust to desired height and relock allen screws.

